

Contents

Notice Of Disclaimer	iii
List of Figures	vii
List of Tables	viii
Preface	ix
1 Introduction	
2 Feature Definition	
2.1 Central Office Transfer	2-1
2.1.1 Selective Transfer	2-2
2.1.2 Fixed Transfer	2-2
2.1.3 Manual Transfer	2-2
2.2 Automatic Number Identification (ANI)	2-2
2.3 Automatic Location Identification (ALI)	2-3
2.4 Forced Disconnect	2-3
2.5 Night Service	2-3
3 User Operations	
3.1 911 Trunk Connection to a PSAP	3-1
3.2 Tones	3-2
3.3 Optional Connections to Recorders and Teleprinters	3-3
3.4 Selector Console	3-4
4 Call Progress Signals	
4.1 Connection to an E911 PSAP	4-1
4.1.1 E911 PSAP Without ANI Display	4-1
4.1.2 E911 PSAP With ANI Display	4-1
4.2 Call Disconnect	4-3
4.2.1 Disconnect for E911 Tandem Calls	4-3
4.2.2 E911 PSAP Central Office Transfer	4-4
4.2.3 E911 Call Transfer Sequence	4-5
4.2.3.1 Selective or Fixed Transfer	4-5
4.2.3.2 Manual Transfer	4-5
4.2.3.3 Transfer Fails	4-5
4.2.4 Disconnect Supervision for Three-Party Connection	4-6
4.2.4.1 Primary PSAP Disconnects First	4-6
4.2.4.2 Added Party Disconnect First	4-7
4.2.4.3 Calling Party Disconnects First	4-7
4.2.5 Trunk Maintenance Test Calls	4-7

5 Feature Assignments

Appendix A: Automatic Location Identification and the Data Management System

A.1 Introduction	A-1
A.2 System Overview	A-1
A.2.1 Typical Processing of an Emergency Call With ALI	A-1
A.2.2 Automatic Location Identification (ALI)	A-1
A.2.3 Data Management System	A-2
A.2.4 Data Management System Database	A-2

Appendix B: Acronyms/Abbreviations

Appendix C: Glossary

Appendix D: References

List of Figures

Figure 3-1	911 Trunk Connection to a PSAP	3-1
Figure 3-2	Customer Premises System Interfaces	3-3
Figure 4-1	E911 Service with ANI, ALI, and SR	4-2

List of Tables

Table 5-1	Data Rates Supported by CMD and PMD	5-4
Table 6-1	Modem Pools Supported by the IWF	6-5