
Loop Testing Messages At The OS/TSC Interface

CONTENTS

I. Introduction	1-1
1.1 Purpose of Document	1-1
1.2 Requirement Statement for GR-202-CORE	1-1
1.3 Scope of this Document	1-1
1.4 Changes to Document	1-3
2. Functional Grouping of Commands	2-1
2.1 Test Access Configuration	2-1
2.2 Circuit Configuration	2-1
2.3 General Test Control	2-1
2.4 Network Control and Recovery	2-2
3. Input Commands and Responses	3-1
3.1 Conventions and Notations	3-1
3.2 Specification Format	3-3
3.3 Input Command and Response Message Specification	3-6
CHG-SYSTEM THRESHOLDS	3-7
CONNECT-CALL	3-9
CONNECT-LOOK	3-11
CONNECT-MAIN DISTRIBUTING FRAME “	3-13
CONNECT-MONITOR	3-15
CONNECT-RING	3-17
CONNECT-TRACER	3-19
DISCONNECT-CALLBACK”	3-21
MEASURE-NOISE	3-23
TEST-CENTRAL OFFICE :	3-25
TEST-COIN	3-27
TEST-ROTARY/PULSE : :	3-31
TEST-FULL	3-33
TEST-LOCATE1 : : :	3-37
TEST-LOCATE 2	3-39
TEST-LOCATE	3-41
TEST-LOCATE GOOD PAIR”	3-43
TEST-LOCATE SHORT	3-45
TEST-LOOP	3-47
TEST-PERMANENT SIGNAL RELEASE	3-51
TEST-QUICK	3-53
TEST-RESISTANCE	3-55

TEST-RINGER	3-57
TEST-SOAK	3-59
TEST-DUAL TONE MULTI-FREQUENCY (DTMF)	3-61
Appendix A: Commonly Used Conventions	Appendix A-1
Appendix B: DENY Output Response Message	Appendix B-1
Appendix C: Message Parameter Descriptions and Values	Appendix C-1
Appendix D: VER - Verification Codes	Appendix D-1
Appendix E: Summary Codes	Appendix E-1
Appendix F: Error Codes	Appendix F-1
Appendix G: Common Preferred DENY Error Codes	Appendix G-1
References	References-1
Glossary	Glossary-1
