

Contents

Preface	Preface-1
1. Introduction	1-1
1.1 Purpose and Scope	1-1
1.2 Structure and Use of This Document	1-1
1.3 Relationship to Other Generic Requirements Documents	1-1
1.4 Terminology	1-2
1.5 Requirements Terminology	1-2
1.6 Requirement Labeling Conventions	1-3
1.6.1 Numbering of Requirement and Related Objects	1-3
1.6.2 Requirement, Conditional Requirement, and Objective Object Identification	1-4
2. High-Level Description	2-1
2.1 Problem/Opportunity	2-1
2.2 General Description	2-1
2.2.1 Move Scenario	2-2
2.2.1.1 Pre-Move Configuration	2-2
2.2.1.2 Move Attempt	2-2
2.2.1.3 Move Completed	2-3
2.3 Assumptions, Dependencies, and Constraints	2-4
3. Feature Requirements	3-1
3.1 Feature Operations	3-1
3.1.1 Main Feature Operations	3-1
3.1.1.1 Move Feature and Move Groups	3-1
3.1.2 Actions for Performing a Move	3-2
3.1.2.1 Recognition of a Move Attempt	3-2
3.1.2.2 Move Verification	3-3
3.1.2.3 Move Processing	3-5
3.1.2.4 Unsuccessful Move Attempt	3-6
3.1.3 Other Feature Operations	3-7
3.1.3.1 Move Group Activation/Deactivation	3-7
3.1.3.2 Displays	3-10
3.1.4 Error Treatment and Abnormal Events	3-12
3.2 Interactions	3-12
3.2.1 Pending Features	3-12
3.2.2 Feature Indicators and Feature Status	3-12
3.2.3 Parameter Downloading	3-13
3.2.4 Multiline Hunt Groups	3-13
3.3 Signaling/Message Structure	3-13
3.3.1 Messages for Terminal Initialization Involving a Move Attempt	3-14
3.3.2 Messages for Move Group Status Changes	3-15
3.4 Administration/Operations	3-20

3.4.1	Memory Administration (Service Changes/Subscription Parameters)	3-20
3.4.1.1	Interface Parameters	3-21
3.4.1.2	Terminal Service Profile Parameters	3-22
3.4.1.3	Other Parameters	3-22
3.4.2	Network Maintenance	3-23
3.4.2.1	Maintenance Commands	3-23
3.4.2.2	Log Messages for Database Maintenance	3-24
3.4.3	Network Data Collection (NDC)	3-25
3.4.4	Network Traffic Management (NTM)	3-26
3.4.5	Billing and Comptroller	3-26
	Appendix A: Data Dictionary for Automatic Moves	A-1
A.1	Scope and Definition	A-1
A.2	Allowed Data Values	A-2
A.3	Data Dictionary	A-2
A.3.1	Automatic Moves Parameters	A-2
	References	References-1

List of Figures

Figure 2-1.	Pre-Move Configuration	2-2
Figure 2-2.	Move Attempt, Terminal B Attempts Initialization on Interface 2	2-3
Figure 2-3.	Move Completed, TSP B Moved to Interface 2	2-3

List of Tables

Table 3-1.	Displays	3-11
Table 3-2.	Terminal Request for Initialization	3-14
Table 3-3.	Network Response to Terminal Initialization Request	3-14
Table 3-4.	Move Group Status Change Request During Call Establishment	3-15
Table 3-5.	Move Group Status Change Information	3-16
Table 3-6.	Response to Move Groups Status Change Request During Call Establishment	3-17
Table 3-7.	Request for Additional Information, or to Report Status of Change Request and Move Group	3-18
Table 3-8.	Network-to-User CALL PROCEEDING Message	3-19
Table 3-9.	Network-to-User PROGRESS Message	3-19
Table 3-10.	First Message Clearing Move Group Status Change Request During Call Establishment	3-20
Table A-1.	Allowed Values of FORM	A-2
Table A-2.	Parameters for Automatic Moves	A-2